

How to set up continuous scan shooting mode

HOW TO SET UP CONTINUOUS SCAN SHOOTING MODE

- Date : 2023.05.02
- Ver. : 1.0



CONTENTS

- 1 . How to set up
- 2 . Basic mode
- 3 . Continuous scan mode
- 4 . Troubleshooting

1. How to set up

- **The option setting can be used from SDK / TWAIN driver 1.0.2.200 version.**
- **You must set up the Twain source to VSP Twain 1.0.2.200 for the SW when you are using.**
- **How to set up**


Step 1. Go to the "C:\Users\WPublic\Documents\WVSP folder".

Step 2. Open the "Twain.INI".

Step 3. Change the ACQUIRE TYPE value as desired. (Default value is 0)

[BASIC]


ACQUIRE TYPE=0

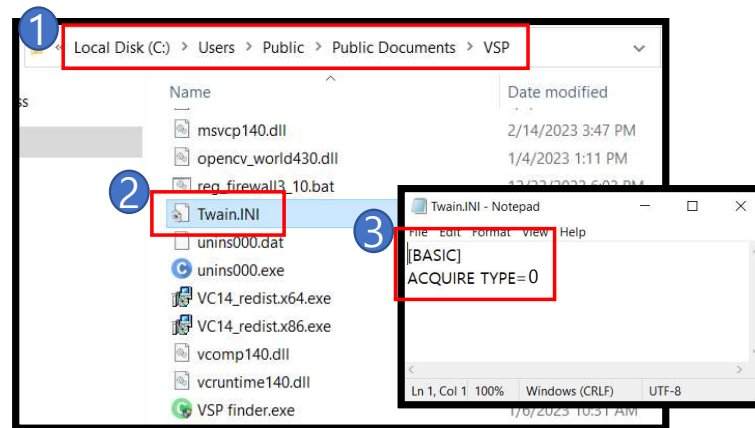


- **ACQUIRE TYPE Setup value**

- 0:** After acquiring the scanned image, it is sent to the viewer immediately(Basic mode) and the Twain connection is closed.
- 2:** Continuous scan shooting mode.

2. Basic mode

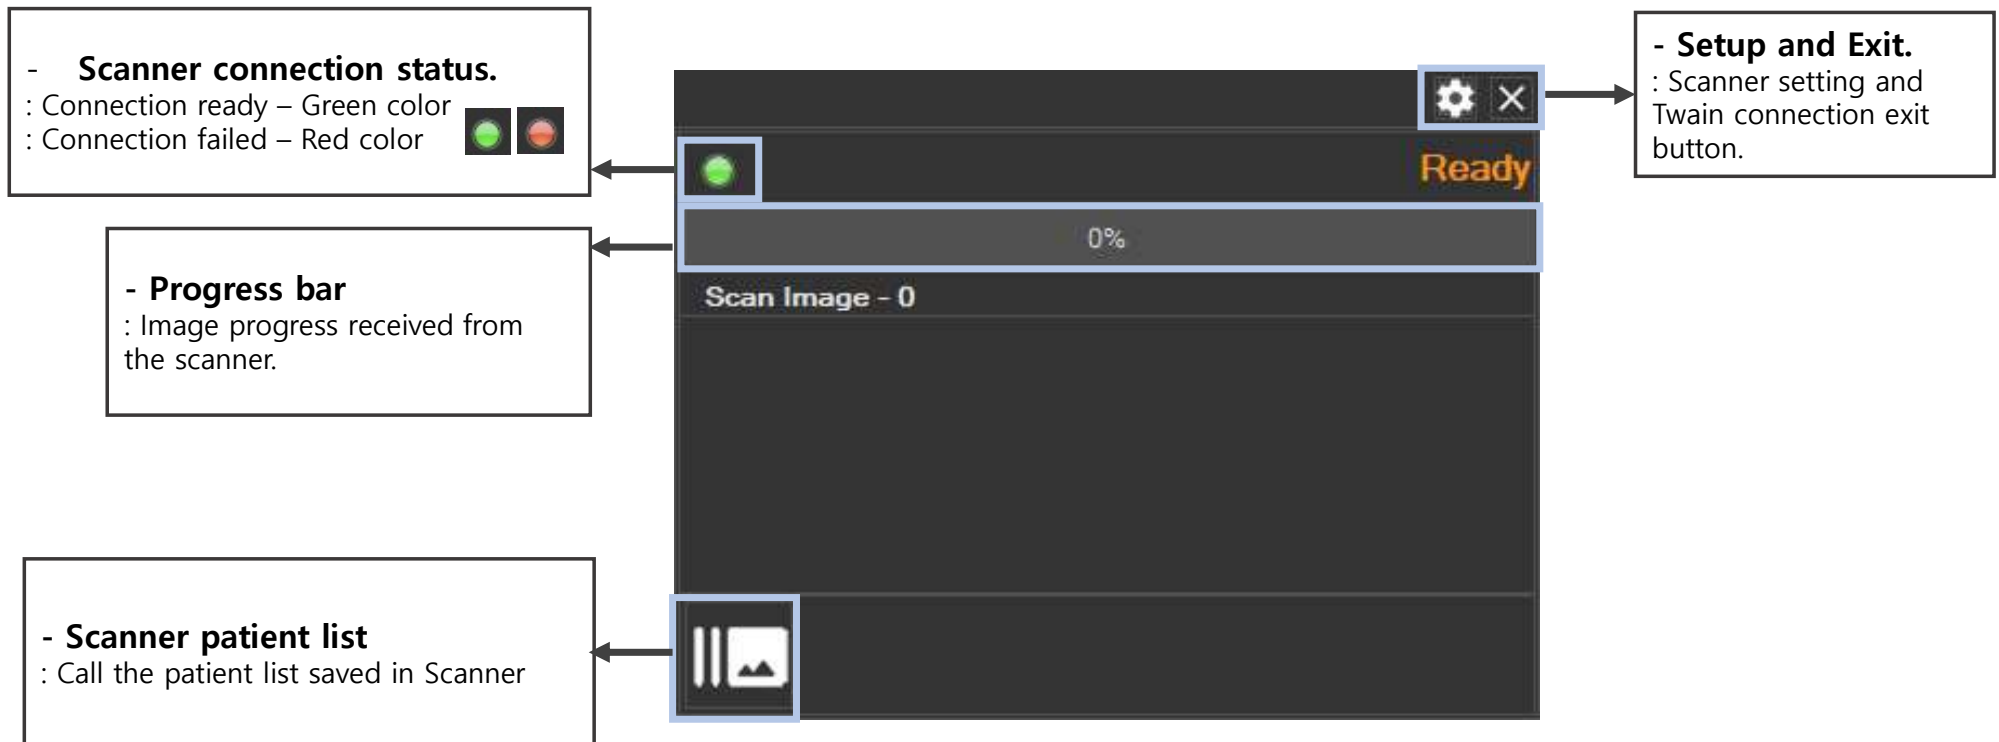

3. Continuous scan mode

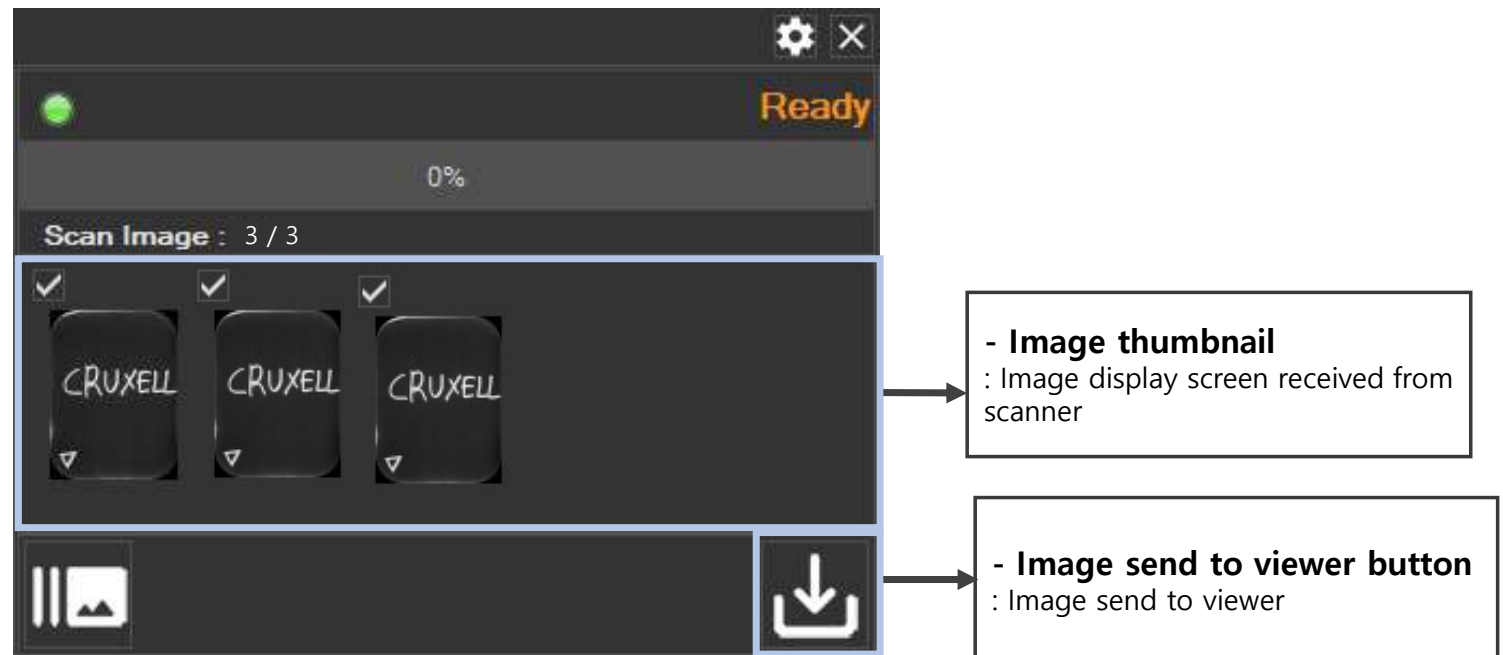

4. Troubleshooting

Problem	Solution
When the scanner connection status is "Waiting"	<ol style="list-style-type: none">1) Right-click on the 'VSP_Tray icon'.2) Click the Ethernet Setting button.3) Select the Ethernet adapter connected to the scanner.4) Save and try to reconnection. 